

SAVE 95% OF YOUR PRINTING COSTS!

for ink-jet printers
EPSON

The original Epson 9-pin cartridges cannot be refilled, so that in order to decrease your costs while ink-jet printing we recommend using refillable cartridges with auto-reset chips. They are easy to install. You need to buy just one cartridge for the whole operating life of the printer!



DIRECTIONS

for filling / refilling the refillable cartridges

There are two access ports in the upper part of the cartridge: AIR and FILLING.

Remove both seals from the ports. Fill the injector through the filling port (fig. 1).

DO NOT DAMAGE the protective tape on the inner part of the cartridge

Slowly pour the ink in the cartridge (~10 ml). Then close the filling port with the rubber seal (fig. 2) and leave the air port open.

Install the cartridges into the printer. **WARNING:** the refillable cartridges will work only if you use the complete set.

When the Cartridge replacement message appears (fig. 3), press the "drop" button, take out the used cartridges and insert the appropriate cartridges. The chips will be reset.

www.inksystem.com
www.inksystem.biz
www.lccpro.com
www.kartridgam.net

Ink SYSTEM®